

# Instruction Manual

12-inch TFT LCD monitor

**PYRAMID**  
[WWW.PYRAMIDCARAUDIO.COM](http://WWW.PYRAMIDCARAUDIO.COM)

MV1240IR




HAZARD WARNING:  
PLEASE DO NOT OPERATE THIS  
UNIT UNLESS VEHICLE IS PARKED  
IN SAFE AND LEGAL AREA

## Control panel



1. Power on/off
2. Menu
3. AV1/AV2
4. Adjust -
5. Adjust +
6. IR transmitter
7. Light

## Remote control

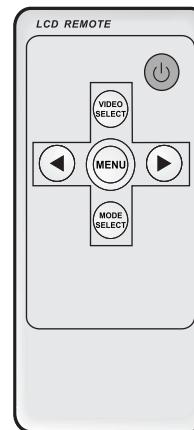

- Power switch
- V1/V2
- Decrease
- Increase
- Menu
- Mode select

## Performance parameter

Type: TFT LCD  
Display size: 12"  
IR transmitter  
Two video inputs  
Resolution: 800X600  
System: NTSC/PAL  
Remote control  
Power supply: DC 12V

## Method of wiring

